




Shihlin BHL-B Instruction Manual


1、Dimension:

Unit: mm

a. Outline

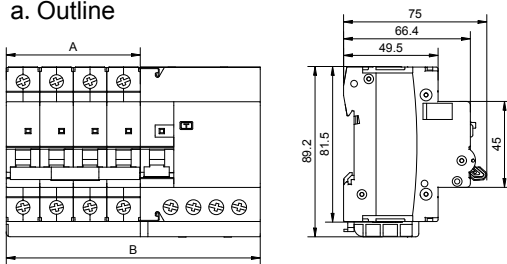


b. Din-Rail

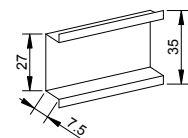

Pole	2P	3P	4P
Dimension A	36	54	72
Dimension B	72	102	135

c. Disassemble

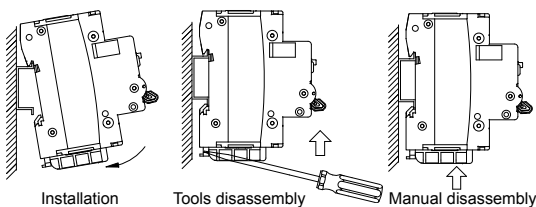

2、Safety Notices:

- Installation, electric work, maintenance and inspection of the device should be performed by qualified engineers having special knowledge.
- Make sure off-power when installation.
- Vertical insert when installation, line and load can not exchange.
- Screw terminal: M5, Screw Tightness: 2N·m, Connecting line area: $1 \leq S \leq 25 \text{ mm}^2$
- Do not use the device in a place of environment with high temperature, humidity, dust, corrosive gases, excessive vibration, shock, etc, to prevent fire accidents and malfunction of device.
- Push test button "T" to imitate leakage movement, leakage breaker should be able to trip. Push one time each month after setting up, so that to check whether it can operate normally.




Shihlin BHL-B Instruction Manual


1、Dimension:

Unit: mm

a. Outline

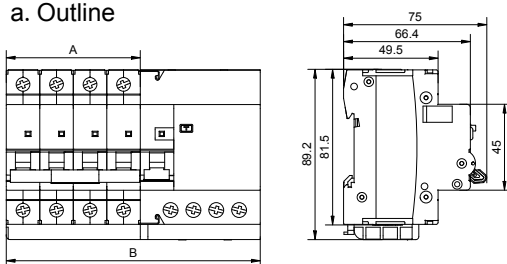


b. Din-Rail

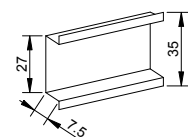

Pole	2P	3P	4P
Dimension A	36	54	72
Dimension B	72	102	135

c. Disassemble

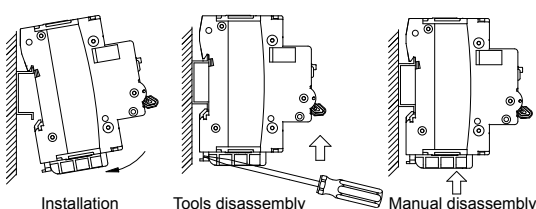

2、Safety Notices:

- Installation, electric work, maintenance and inspection of the device should be performed by qualified engineers having special knowledge.
- Make sure off-power when installation.
- Vertical insert when installation, line and load can not exchange.
- Screw terminal: M5, Screw Tightness: 2N·m, Connecting line area: $1 \leq S \leq 25 \text{ mm}^2$
- Do not use the device in a place of environment with high temperature, humidity, dust, corrosive gases, excessive vibration, shock, etc, to prevent fire accidents and malfunction of device.
- Push test button "T" to imitate leakage movement, leakage breaker should be able to trip. Push one time each month after setting up, so that to check whether it can operate normally.