


Shihlin **BHR-B4 Instruction Manual**


1、 Dimension:

Unit: mm


a. Outline

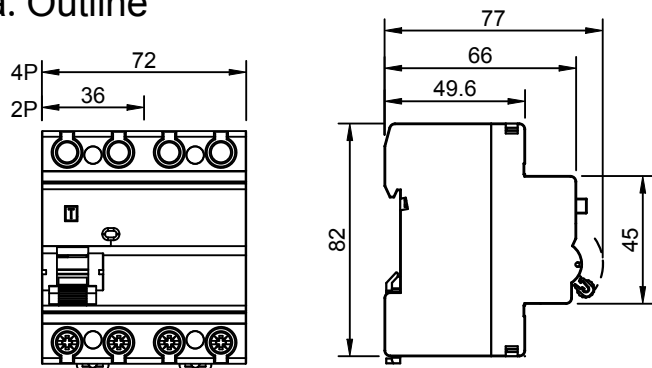

b. Din-Rail

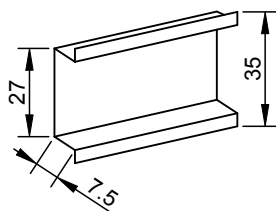

c. Installation

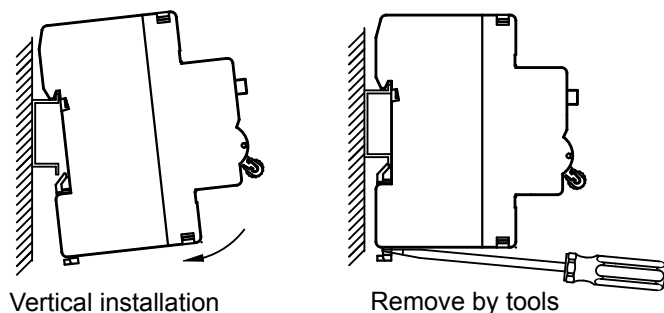

2、 Safety Notices:

- a. Installation, electric work, maintenance and inspection should be implemented by electric professional engineer.
- b. Make sure the power is off when doing installation.
- c. Please install vertical with all.
- d. Wiring screw: M6
Screw Tightness: 2.5N·m
Cross section area of connection:
 $4 \leq S \leq 35 \text{ mm}^2$.
- e. Do not use the device in environment with high temperature, humidity, dust, corrosive gases, over vibration, shock and other abnormal places. To avoid the device malfunction or can't trip and cause the fire accident.
- f. To push the test button and the device should be trip automatically. After installation should push the test button to make sure the device function is normal.

